



SONALKSIS

Free^G



Operation Guide

Contents



Introduction	3
Installation	4
...with the Plug-in Manager	4
Authorisation	4
Operation	5
Preferences	7
Support	9
Appendix: Technical Specifications	10



Sonalksis Free^G

Introduction

This guide describes the operation of the Sonalksis Free^G. For detailed installation instructions, please refer to the Sonalksis *Plug-in Manager* User Guide. You can read more about general features common to all Sonalksis plug-ins in the *Universal Plug-in User Guide*.



The Free^G is everything you need in a master fader. A simple, but absolutely indispensable plug-in, the Free^G extends the functionality of a typical audio host by providing a large-format style fader, along with ultra accurate metering. Free^G helps to maximise workflow with extended, customisable metering, and multiple control features and settings. By delivering enhanced control of amplitude, phase and pan in the insert chain, with user configurable industry standard metering ballistic options, the Free^G is the perfect master monitor control.

Installation



 
...with the *Plug-in Manager*

All Sonaksis plug-ins are installed using the 'Plug-in Manager'. The Plug-in Manager simplifies the task of managing multiple Sonaksis plug-ins, and takes care of downloading, installing, authorising and updating your Sonaksis plug-ins.

Detailed instructions can be found in the *Plug-in Manger User Guide*.



If your audio computer is not internet enabled, you must go to the 'Product Activation' section on the Sonaksis website in order to obtain an authorisation file. You will need the 'Activation Code' that is displayed when you run the Plug-in Manager on your offline system. You can then download your authorisation file which you simply need to drag-and-drop onto the Plug-In Manager window.

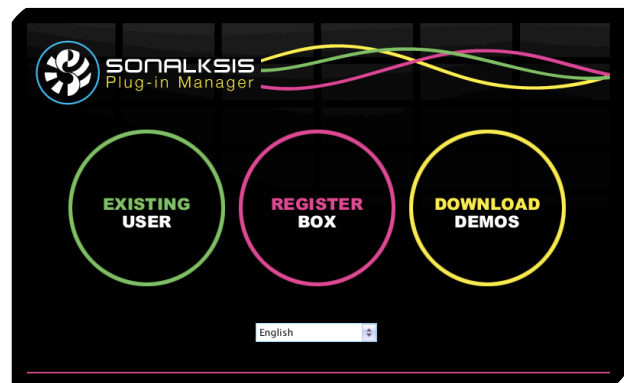


Authorisation

If your computer is internet enabled, all license authorisation takes place automatically. When you install Sonaksis plug-ins, any plug-ins for which you have licenses will be authorised by the Plug-in Manager.

Unlicensed Sonaksis plug-ins will function for 14 days after installation without authorisation, after which the plug-ins will no longer process audio. After this period, you can still reactivate a plug-in by obtaining a valid license.

Operation


You can read more about general features common to all Sonalksis plug-ins in the *Universal Plug-in User Guide*.

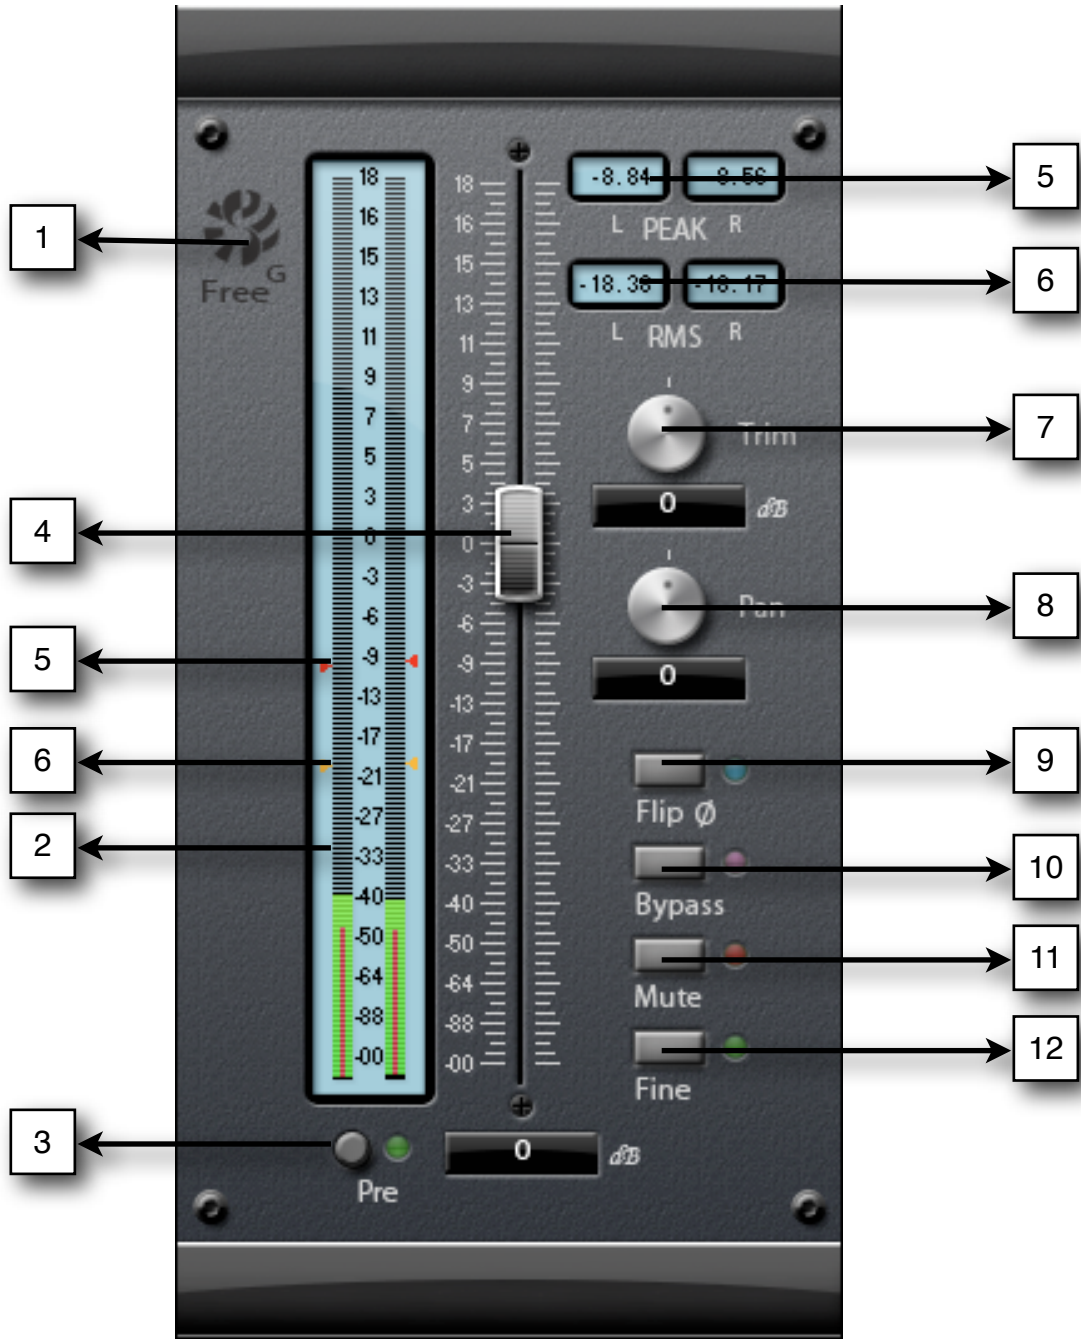

1. **Settings (Sonalksis logotype):** Click this button to access the Preferences (Settings) panel.
2. **Meter:** The meter displays a current indication of signal level. The main display is a classic Peak-type level meter, which follows the signal in accordance with the metering type selected on the Preferences panel. The superposed red bar displays the current instantaneous signal RMS.
3. **Pre:** Selecting 'Pre' switches the fader to display the pre-fader, pre-pan, pre-trim input signal.
4. **Fader:** The fader is the main plug-in control, and allows you to adjust the level of the incoming signal. Hold 'SHIFT' to fine-adjust the level, or enter a value in the textbox beneath the fader. Double click, Alt-click or Ctrl-click (Win)/Apple-click (Mac) to reset the fader.
5. **PEAK:** This box, and the red arrows on the meter, displays the current highest peak value recorded (using the metering law configured on the Preferences panel). Click boxes to reset.
6. **RMS:** This box, and the yellow arrows on the meter, displays the current highest instantaneous RMS value recorded. Click the boxes to reset.
7. **Trim:** The Trim dial provides a course input level adjustment. The Trim range can be configured using the preferences panel. Hold 'SHIFT' to fine-adjust the level, or enter a value in the textbox beneath the dial. Double click, Alt-click or Ctrl-click (Win)/Apple-click (Mac) to reset the dial.
8. **Pan** (not applicable in mono version): The Pan dial allows a stereo signal to be panned to the left or to the right. The Pan law is configured using the preferences panel. Hold 'SHIFT' to fine-adjust the setting, or enter a pan position in the textbox beneath the dial. Double click, Alt-click or Ctrl-click (Win)/Apple-click (Mac) to reset the dial.
9. **Flip Phase:** The Flip Phase button inverts the phase of the signal, for mixing applications.
10. **Bypass:** The Bypass button provides a soft-bypass for the plug-in.
11. **Mute:** The Mute button will mute the signal.
12. **Fine:** Fine mode allows for an alternate method of fine-calibration of the fader. When the fader is set approximately, pressing 'Fine' will 'zoom in' on the fader, and offer a linear-law fader, which you can adjust with greater accuracy. The range of the Fine scale can be configured in the Preferences panel.

Preferences

 The Sonalksis FreeG Setup Preferences

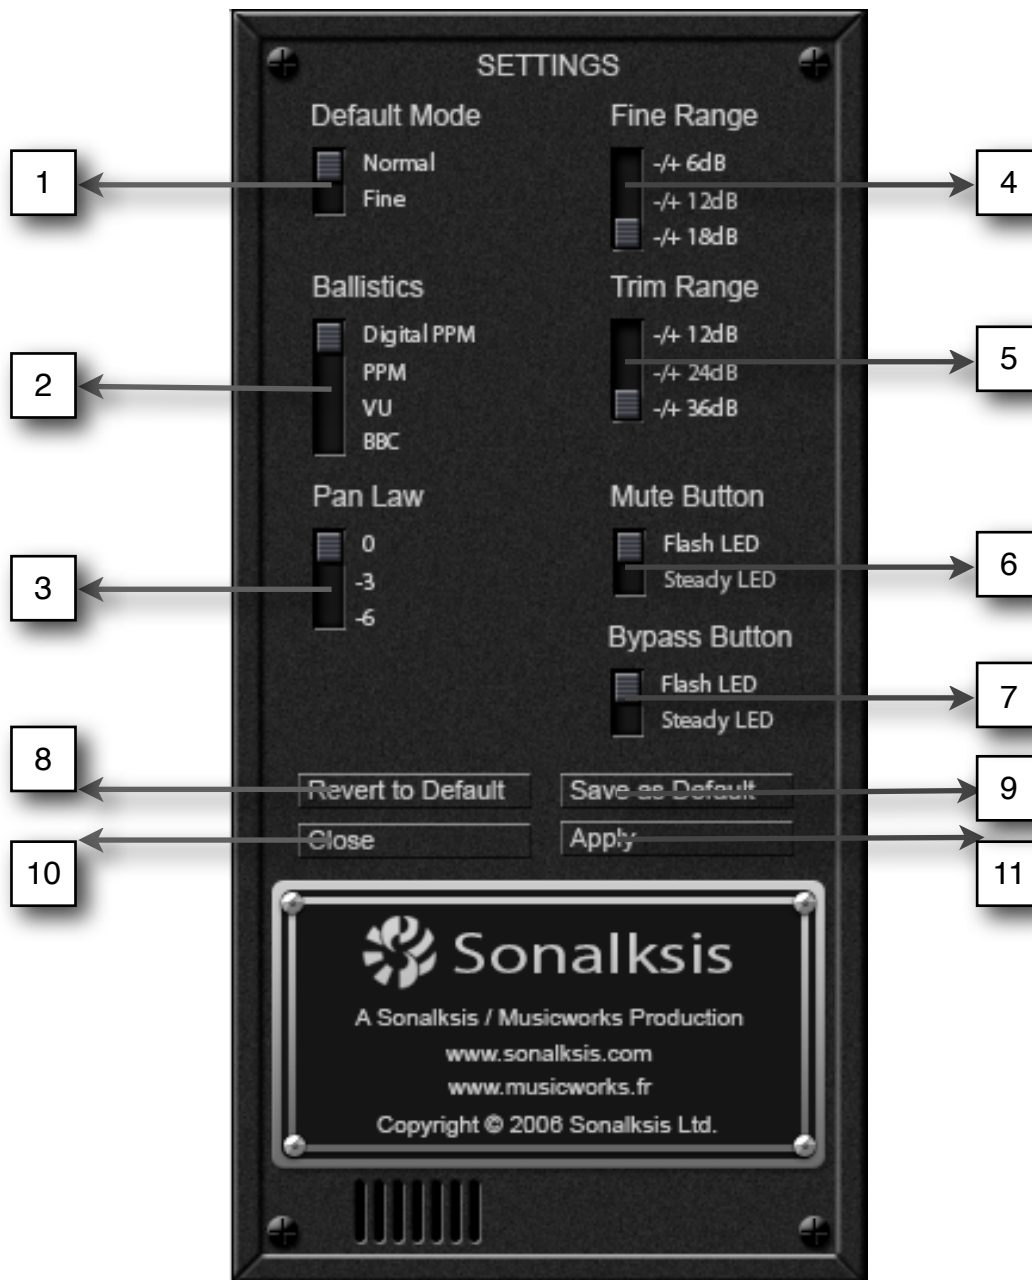

1. **Default Mode:** Sets the default mode of the plug-in when instantiated.

Normal: Fader range set between $-\infty$ and +18 dB

Fine: Fader range specified in Fine Range settings. New plug-in instances start with Fine mode enabled, using the linear fader law.

2. **Ballistics:** Sets the Meter LCD curve ballistics.

DigitalPPM: 99% Attack in 1ms, 90% Decay in 300ms

PPM: Nordic PPM, 80% Attack in 5ms, 20dB (90%) Decay in 1.5s

VU: 90% Attack in 300ms, 10% Decay in 300ms

BBC: BBC/EBU PPM 80% Attack in 10ms, 24dB (93.7%) Decay in 2.8s

3. **Pan law:** Sets Pan dial behaviour. At either extremity of the pan dial, the corresponding channel is at full volume. The Pan law option allows you to adjust the level of both channels when the pan is in the centre.

- 0 dB
- 3 dB
- 6 dB

4. **Fine Range:** Sets the Fader range for Fine mode.

- /+ 6 dB
- /+ 12 dB
- /+ 18 dB

5. **Trim Range:** Sets the Trim dial range.

- /+ 12 dB
- /+ 24 dB
- /+ 36 dB

6. **Mute Button:** Configures the behaviour of the LED when the Mute button is pressed.

- Flash LED
- Steady LED

7. **Bypass Button:** Configures the behaviour of the LED when in Bypass mode.

- Flash LED
- Steady LED

8. **Revert to Default:** Discard the current configuration and reload the global default.

9. **Save as Default:** Save the current configuration as the global default to be used for new plug-in instances.

10. **Close:** Discard the current changes, and use the settings that were configured when the panel was opened.

11. **Apply:** Apply the current settings of the panel.

Support



You can visit the [Sonalksis website](#) to find the latest product information. If you are a registered user you will automatically receive relevant information about new releases and updates, unless you unsubscribe from this service.

All Sonalksis plug-ins are installed, authorised and updated using the 'Plug-in Manager' application. You can download this application from the Sonalksis website.



If you encounter any difficulties when installing or using our products, please ensure that you have read all appropriate documentation, including the relevant user guides and FAQ on our website before contacting us.



If you are unable to resolve your issue after reading all appropriate documentation, you can log in to your Sonalksis user account on our website, and access the 'Support' section where you can request direct assistance.

www.sonalksis.com/support

Address

Sonalksis Ltd.
27 Parliament Street
Liverpool
L8 5RN
United Kingdom

Tel: +44 (0)151 3240022
Fax: +44 (0)870 3305980

Appendix: Technical Specifications

Free^G Supported Sample Rates:

- 44.1 kHz
- 48 kHz
- 88.2 kHz
- 96 kHz
- 176.4 kHz
- 192 kHz

Free^G Control Ranges

Fader Gain	Trim Range	Pan (Stereo Only)	Phase Flip	Bypass	Mute
+18 dB -∞ dB	+/- 12dB +/- 24dB +/- 36dB	100 Left 0 100 Right	Off/On	Off/On	Off/On

NOTICE

The information contained in this document is subject to change without notice.

Sonalksis makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Sonalksis will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Sonalksis Ltd.

Acknowledgements

VST is a registered trademark of Steinberg Media Technologies GmbH.

RTAS is a registered trademark of Avid Technology, Inc.

Audio Unit and Mac OS X are trademarks or registered trademarks of Apple Computer, Inc.

All other trademarks are the property of their respective owners.

Content copyright © 2009 Sonalksis Ltd. All rights reserved.